


ECOTROC® DDN 200 - 705

Operating Manual

Adsorption Dryer

Rev 01_0424

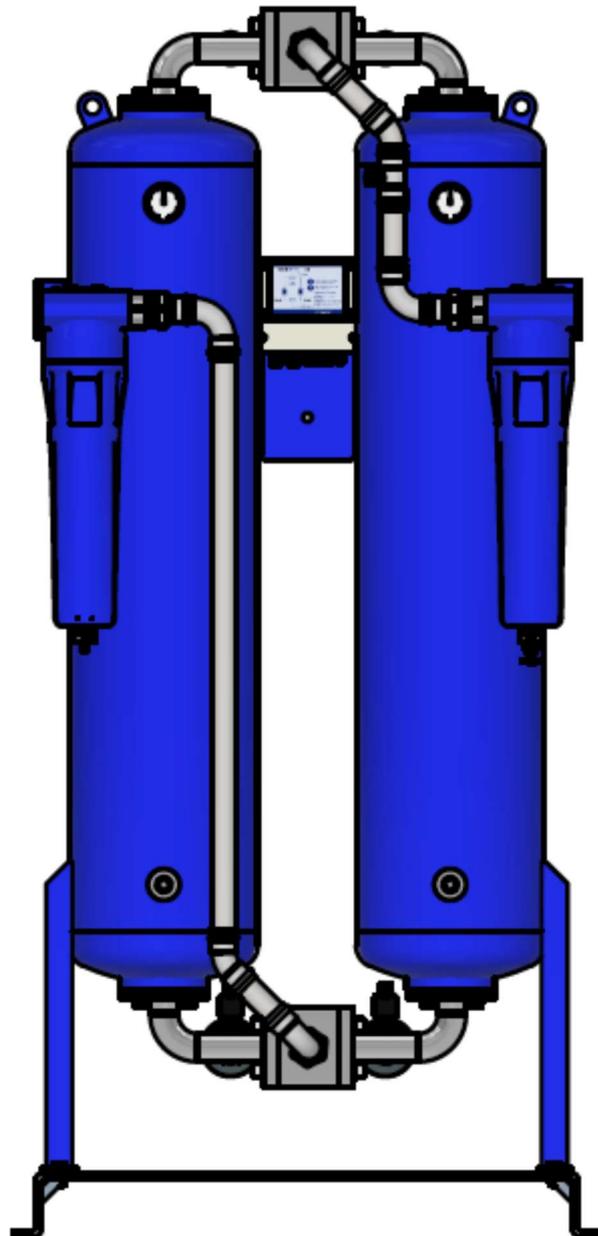

Contents

1	General information	3
1.1	System data	3
1.2	Contact data	3
1.3	Accompanying documents	3
1.4	Warranty notes	4
1.5	Operating manual	4
1.6	Signs and symbols used	5
2	Intended purpose / use	6
2.1	Intended use	6
2.2	Performance data	7
3	Safety notes	8
3.1	Signs and symbols	8
3.2	Danger zones	9
4	Technical product data	11
4.1	Equipment overview, front view	11
4.2		11
4.3	Equipment overview, rear view	11
4.4	Function description	12
5	Monitoring the operation	13
6	Transport, storage and setup	13
6.1	Transport	13
6.2	Storage	14
6.3	Setup	14
7	Installation	15
7.1	Recommendations for installation	15
7.2	Demands on the installation	16
7.3	Elimination of hazards	16
8	Commissioning	16
8.1	Commissioning prerequisite	16
8.2	Pressurisation	17
8.3	Mains operation	17
8.4	Disconnecting from the mains	18
9	Maintenance	19
9.1	Regular maintenance work	19
9.2	Daily checks	19
9.3	Checking the pressure dewpoint	20
9.4	Overview of maintenance parts	20
9.4.1	Annual maintenance	20
9.4.2	Two- and four-year maintenance	20
9.5	Replacing the filter elements	21
9.6	Replacing the desiccant	21
9.7	Replacing the pistons and cylinder liners	23
9.8	Replacing the solenoid valves	24
9.9	Replacing the silencers	25
9.10	Replacing the pressure dewpoint sensor	26
10	Faults	27
11	EU Declaration of conformity	28

1 General information

Please complete the following information according to the type plate, vessel plate and contract documents. This enables the manufacturer to clearly identify the dryer and makes it easier to give advice if there are queries. It also simplifies the provision of spare parts and support. This may correspond to separate pieces of equipment for the individual devices.

1.1 System data

Model: _____

Order No.: _____

Vessel No.: _____

Serial number: _____

Year of manufacture: _____

Date of commissioning: _____

1.2 Contact data

Company: _____

Address: _____

Phone: _____

E-Mail: _____

1.3 Accompanying documents

Applicable documents which are not included with this documentation:

- Vessel documents
- Installation drawing
- Documentation for additional equipment parts
- Controller documentation
- Calibration certificate (if dewpoint controller is installed)

1.4 Warranty notes

For the conditions necessary for compliance with the warranty, please refer to our "General Terms of Sale and Delivery"

The warranty shall be void if:

- The adsorption dryer is used for anything other than its intended use.
- The instructions in this operating manual are not observed.
- External influences (e.g., aggressive substances) cause damage to the adsorption dryer.
- Maintenance intervals are not adhered to.
- Damage is caused due to incorrect or defective maintenance.
- The adsorption dryer is operated although defects are evident.
- An unfavorable or incorrect installation is selected.
- The necessary process conditions are not stipulated by the system concept (e.g., highly undersaturated compressed air at the inlet).

1.5 Operating manual

This operating manual will help clarify any outstanding questions concerning the setup, installation, operation, maintenance, repair and disposal of the dryer. It contains useful tips and advice.

It is not only written for the operator who is responsible for monitoring the daily operation of the device, but also for the service personnel who performs the installation and service. Maintenance and repair work may only be carried out by qualified personnel!

This operating manual must be read before any installation and maintenance work is started. All safety instructions must be observed!

The operating manual must be kept in the vicinity of the dryer.

As already mentioned in the warranty notes, the manufacturer accepts no liability for damages resulting from disregard of the operating manual.

1.6 Signs and symbols used

The following symbols are listed in this manual and/or are affixed to the construction:

Symbol	Meaning
	Tip This symbol indicates tips for the efficient use of the adsorption dryer!
	Note This symbol indicates instructions for the safe handling of the adsorption dryer.
	Caution / Warning This symbol indicates general hazards or dangerous situations.
	Danger! Compressed air This symbol warns of dangers due to compressed air.
	Danger! High voltage This symbol warns of dangers due to electric voltage.
	Slip hazard This symbol warns of the risk of slipping.
	Personal protective equipment – Ear protectors Wear ear protectors
	Personal protective equipment – Respiratory protection Wear respiratory protection
	Personal protective equipment – Goggles Wear goggles

2 Intended purpose / use

The adsorption dryer is designed for removing compressed air by adsorption in industrial compressed air systems. It requires the supply of saturated compressed air from a supply source.

The main task is to reduce vaporous water components in the compressed air. Upstream filters and dryers ensure that only particles and drop shapes are separated.

The desiccant which is specifically designed for this purpose is used to store the water vapor molecules from the compressed air in the open pores of the adsorbent, thereby reducing the moisture content of the compressed air.

2.1 Intended use

The adsorption dryer is exclusively designed for drying compressed air! If the adsorption dryer is to be used with other gases, this must be agreed with the manufacturer. Other safety guidelines may apply here!

The adsorption dryer must be set up at a site indoors:



- which is suitable for the weight,
- weatherproof (exposure to sun should be avoided),
- dry,
- frost-free,
- vibration-free,
- not in potentially explosive atmospheres,
- which can be accessed for maintenance and servicing,
- which at best has little dust exposure,
- which is free from dangers due to the expansion factor or airflow sounds,
- which is free from aggressive or corrosion-promoting substances.



The adsorption dryer must only be operated within the allowable operating conditions. These are defined on the type plate and vessel plate. Any other use is considered improper, and the manufacturer accepts no liability.

The adsorption dryer must not be converted in any way and its components must not be modified. The use of components other than the original one from the manufacturer is not permitted, unless this has been agreed with the manufacturer.

The values shown on the vessel plate are the maximum permissible values as per the pressure equipment directive. These values are not directed at the operating conditions. The maximum operating conditions can be found on the type plate of the adsorption dryer.

For the nominal performance data of the adsorption dryer, please refer to the Section "Performance data".

Exceeding or even significantly undercutting the design data can lead to bad pressure dewpoints!

The compressed air supplied to the device must be of the following quality:

- Free from aggressive and corrosive substances
- Free from particles and solids
- Moisture-saturated
- Must be within the temperature conditions for the design.



In principle, the adsorption dryer can also be operated without any pre-treatment, but this may be detrimental to the service life of the adsorbent. Droplets of oil and particles are stored in the open pores and reduce the adsorption capacity of the adsorbent.



Where temperatures are above 131 °F, previously collected moisture can be released again or can no longer be absorbed!

2.2 Performance data

The performance data of the individual types of devices is shown in the table below. The data is based on the operating conditions of the compressed air temperature + 95 °F and 102 psi operating pressure, and a moisture content of the compressed air of 100 %.

Type	Nominal volumetric flow rate cfm	Connection
DDN 200	200	1 ½" NPT
DDN 285	285	1 ½" NPT
DDN 350	350	1 ½" NPT
DDN 480	480	2" NPT
DDN 590	590	2" NPT
DDN 705	705	2" NPT

Based on 14,5 psi (a) and 68 °F

Supply voltage	115 V, 50-60 Hz
Safety class	IP 54
Min. / max. allowable pressure	58 / 232 psi
Sound pressure level (free-field measurement in distance of 1.5m)	up to 80 dB (A)
Min. / max. temperature	+35,6 to 122 °F



Routine inspections must be carried out on the pressure vessels. The operator is solely responsible for the registration. Regional or national regulations may apply in addition. Please also refer to the additional vessel documentation!

3 Safety notes

The DDN adsorption dryers have been built according to state-of-the-art technology and the latest safety regulations. However, there is still a risk of danger during operation, maintenance, installation and servicing, and during transport and setup. In particular, the disregard of safety regulations when handling compressed air may result in serious injury or death. Expertly trained personnel and those trained in safety should therefore only use the system.



- Observe the safety notes in this manual and on the adsorption dryer.
- Observe all safety notes, even those in the individual chapters.
- Observe all legal guidelines and safety regulations (the latter may vary from region to region!)
- Observe all local site regulations which are stipulated for the field of application.

3.1 Signs and symbols

The following signs are affixed to the adsorption dryer:


Vessel plate (on the front underneath the pressure gauge)

it includes details of the year of manufacture, vessel number, max. permissible temperature, maximum permissible pressure, volume, min. temperature, test pressure and test date.

Type plate (on the right side of the vessel)

it shows details of the type, year of manufacture, serial number of the device, performance data, weight and filters installed.

On every vessel - Vessel plate:

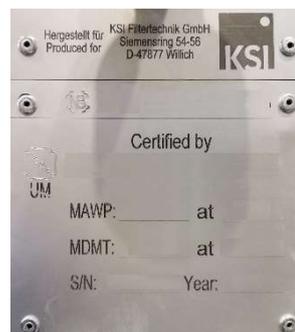

Only once on the adsorption dryer - Type



plate:


The type plates on the device show important information. Please make sure that they are always legible and that they can be accessed.

3.2 Danger zones

Risk from pressure-bearing parts



Risk of slipping due to spilt desiccant on the floor

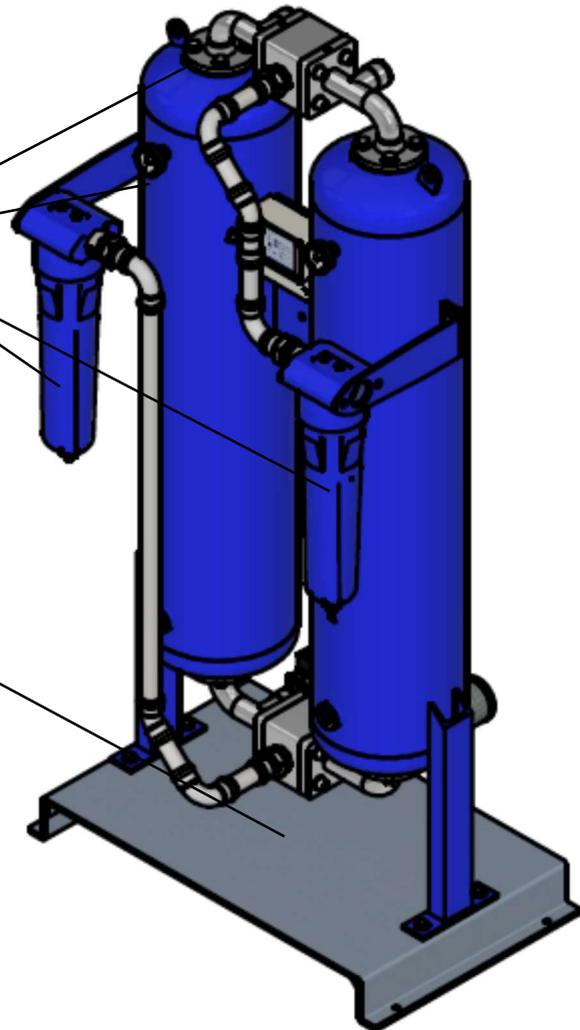

Never operate the device outside of the load limits shown on the vessel plate.



- Never carry out work as long as the device is under pressure.
- Do not modify the structure of the device or change its function.
- Only use the adsorption dryer for its intended purpose.
- Do not climb onto the device.
- Do not carry out welding work on pressure-bearing parts.
- Wear respiratory protection and eye protection when changing the desiccant.
- Risk of slipping due to spilt desiccant.
- Always check that the silencers are secure and wear eye protection.
- Never operate the device if there is apparent damage.
- Avoid sparks and naked flames in the vicinity of the desiccant.
- Never lift the device by the equipment parts, only use the lifting lugs.
- Only carry out work on the device if it has been disconnected from the power supply.

Adsorbents

The desiccants used do not fall into the hazardous substances group and are therefore not subject to labelling requirements. Nevertheless, please observe all common safety measures with regard to using chemicals. Please also wear your personal protective equipment (goggles and respiratory protection). Please also note that the material accumulates contaminants, including oil vapor parts. This can cause additional dangers.


Should you require further information, contact the manufacturer to obtain a copy of the safety datasheet for the desiccant.

4 Technical product data

4.1 Equipment overview, front view


4.2

- 1 Inlet
- 2 Outlet
- 3 Draining nozzle desiccant
- 4 Pressure gauge
- 5 Controller
- 6 Pre filter
- 7 Final filter
- 8 Condensate drain prefilter
- 9 Manual drain after-filter
- 10 Bridge of pipe with diffusor
- 11 Changeover valve inlet
- 12 Changeover valve outlet
- 13 Dewpoint sensor (optional)

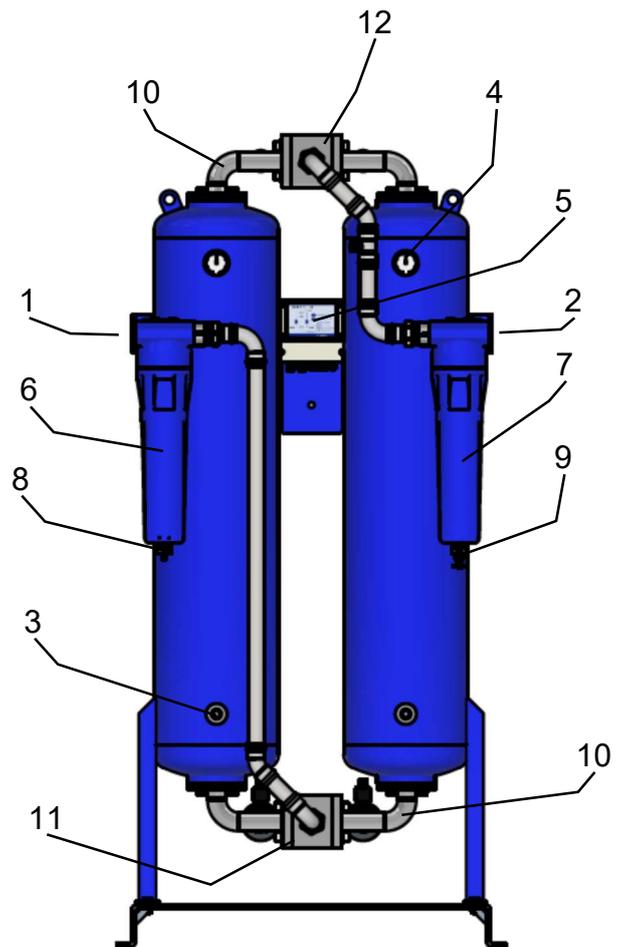

4.3 Equipment overview, rear view

- 1 Lifting lugs
- 2 Changeover valve
- 3 Silencer
- 4 Solenoid valve expansion
- 5 Changeover valve inlet

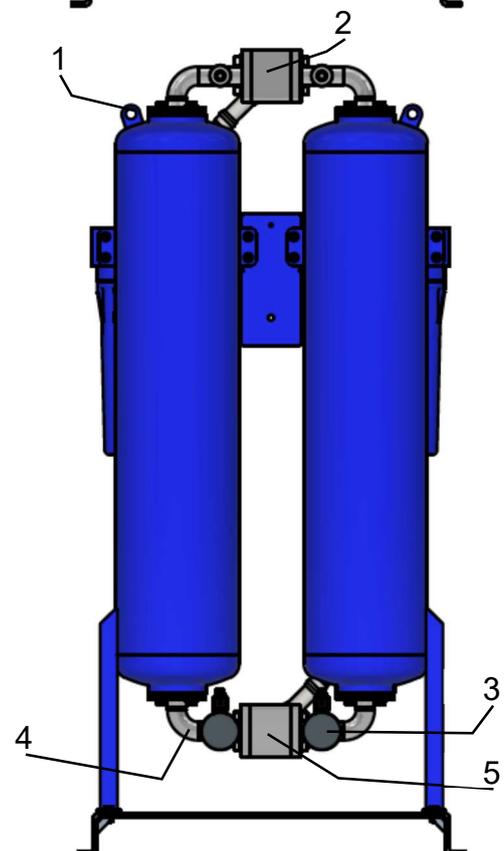

4.4 Function description




From the filled adsorbent material, (desiccant in this case), moisture is stored in the large, open pores of the adsorbent material, thus reducing the moisture content in the compressed air.

Through the joining pipe and possible pre-treatment, the compressed air is fed via the inlet into the diffuser (flow distributor and sieve). The compressed air is hereby distributed over the whole vessel cross-section for optimum efficiency. Based on the laws of physics and a calculated and required contact time, the abovementioned moisture content is stored in the open pores of the desiccant. The cleaned compressed air then exits the vessel again through a sieve on the outlet.

As the temperatures rise, the performance of the desiccant is reduced since the so-called adsorption heat builds up in the desiccant as the amount of moisture increases and as temperatures exceed 131 °F, the stored moisture is then released again from the agent, i.e., no more moisture is stored.

The moisture stored in the desiccant gradually saturates the material. During the course of the defined adsorption phase, the desiccant bed is optimally used. After a predetermined time, the desiccant is then desiccated again following the counter-flow principle using the dried compressed air, which is removed from the dry output flow through a nozzle. This process constantly switches between the two vessels. With the appropriate compressed air quality at the inlet, it is possible for the service life of the desiccant to exceed well over 10,000 hours.

Operating principle:

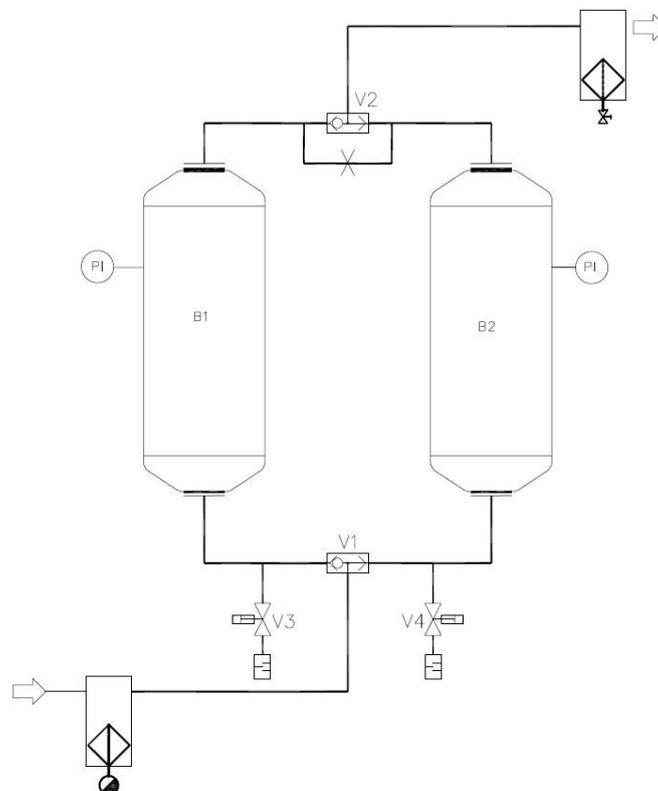

5 Monitoring the operation

The following components are provided for regular monitoring:

The pressure gauges show the operating pressure. They provide information about the regular switch-over of the adsorption dryer.




The Ecomatic control display (shown on the right here), uses LEDs to inform you of the status or phase which the adsorption dryer is currently in.



If a dewpoint controller is used, then the operating status is also shown. To do so, press the arrow keys to display all information about the current status. The screens are shown on the right.



When daily checks are carried out, be mindful of any noises which are caused by the regeneration process. The pressure gauges should also be taken into consideration here. The expansion and noises of the purging air should always be regular. Brief interruptions in the flow noises for example indicate a defective solenoid valve or control fault.

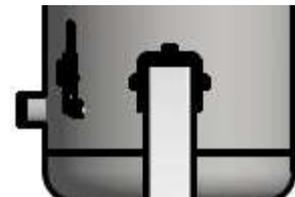


6 Transport, storage and setup

6.1 Transport

i Although great care is taken, please check immediately whether the adsorption dryer has been damaged in any way. Any kind of transportation damage must be pointed out immediately to the deliverer and manufacturer.

- Suitable hoisting equipment must be provided for the transportation, loading and unloading process.
- The device must only be lifted at the designated points: lifting lugs or transport pallet.
- Take the weight of the adsorption dryer into account and provide suitable assistive equipment.
- Secure the adsorption dryer against tilting using suitable means.
- Do not remove the packaging material until the device is moved to its place of installation.
- Only appropriately qualified personnel may carry out the abovementioned tasks.
- Observe all regulations on accident prevention.

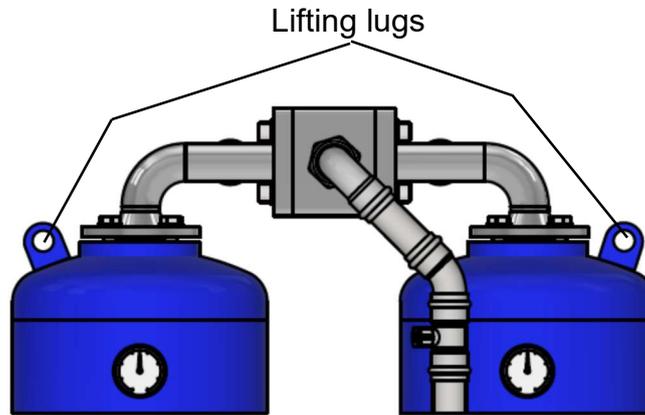

6.2 Storage



If the device needs to be stored before being commissioned, ensure that the storage site fulfils the following requirements:

- Indoors only
- Dry
- Frost-free
- Protected against weather impact.



If the device is stored after having been commissioned, please proceed as follows:

- Depressurize the adsorption dryer.
- Disconnect the adsorption dryer from the compressed air system.
- Close the compressed air inlet and outlet.

6.3 Setup



Please refer to the setup conditions described in Section 2.1. The basic data required for the setup can be found in the Performance data in Section 2.2.

When setting up, make sure,

- that the ground is level and capable of carrying the weight. Please also take into account that the vessel will be filled with water during the routine inspection.
- Make sure there is enough space around the adsorption dryer to carry out the servicing and maintenance work. We recommend at least 0.8m.
- Make sure that the adsorption dryer can be reached and accessed by the lifting gear.
- The adsorption dryer must not be accessible to non-experts, or warning signs should be affixed for inexperienced persons.
- The adsorption dryer cannot be rammed by haulage vehicles.
- The signage is clearly visible at all times.

There are mounting holes in the base section of the adsorption dryer. These should be used to anchor the device into the ground, as long as the ground allows it.

7 Installation

7.1 Recommendations for installation



Proper installation is the basic prerequisite for the safe and problem-free operation of the DDN series.

We recommend the installation of shut-off devices both upstream and downstream of the adsorption dryer. The adsorption dryer can thereby be disconnected from the compressed air system during maintenance. If operation cannot be interrupted during maintenance, then a by-pass line must be provided. It should at least include a filter combination MFO and SMA to prevent a contamination of moisture in liquid form downstream of the adsorption dryer.



We recommend installation after a corresponding pre-treatment. Filters and separators should already be installed prior to this to prevent the rapid saturation of the prefilter which is part of the delivery. The adsorption dryer is usually installed behind an air cauldron.

A filter with a separation degree of 0.01μ must be installed immediately in front of the adsorption dryer (included in the delivery) to collect any possible additional liquid drops and solids which would otherwise close up the open pores of the adsorbent material for the drying process.

Installing the device behind an air cauldron also has the advantage in that pulsating compressed air is buffered and the temperature at the inlet of the adsorption dryer is lower because it cools down in the air cauldron.

Choose a place of installation with the lowest possible compressed air temperature and with the highest level of saturated compressed air. This then increases the service life of the desiccant and the adsorption dryer works most efficiently.

When installing an air cauldron, make sure that:

- There is no reverse flow (e.g., install a non-return valve)
- The compressed air inlet temperature does not exceed the maximum permissible value
- Pressure shocks or pulsating compressed air are buffered by the corresponding filters
- The condensate separation of the prefiltration works properly

7.2 Demands on the installation

Prior to installation, check the following points:



- The compressed air system and the adsorption dryer must be free from pressure.
- For compressed air systems which need to remain under pressure, shut-off devices have to be protected against unintentional opening.
- The operating pressure in the system cannot be higher than the maximum permissible operating overpressure of the adsorption dryer.
- There must be no pressure surges in the system in the desiccant (e.g., from valves which open abruptly).
- The pipelines are designed for the operating pressure, nominal width and volume.
- No possible vibration transmission or vibration.
- No residue left in the pipeline from mechanical processing.

7.3 Elimination of hazards

Please be aware of the risks associated with the installation of the device:



- Do not work on parts which are under pressure.
- The pipelines must be kept in place with brackets, the adsorption dryer is not designed to act as a support for the pipes.
- The adsorption dryer must only be used in the predetermined operating conditions (see vessel plate), it is the operator's duty to observe these values.

8 Commissioning



All work on DDN adsorption dryers and on the feeder and drainage systems must only be carried out by expertly trained persons and by those with experience in the field of compressed air!

8.1 Commissioning prerequisite



The following points must be checked immediately prior to commissioning:

- The maximum operating values must not be exceeded.
- Upstream and downstream shut-off devices are closed.
- All connections and screw connections are secure. Check this and tighten if necessary, using a suitable tool.
- Visually check again for any signs of damage. Do not use the adsorption dryer if it is damaged in any way.

8.2 *Pressurisation*



Only once you have successfully completed all the checks listed in Section 8.1 can you perform the following steps in the specified order.



Wear ear protection for this as the flow noise can get very loud.

- Make sure that the compressed air system is under pressure upstream of the adsorber.
- Slowly open the cut-off valve upstream of the adsorption dryer until you hear the flow noise.
- Keep an eye on the pressure gauge on the vessel. Pressurisation must rise slowly.
- At 58 psi, close the shut-off device again at the inlet. Check all connections for leaks. If leaks are found, the adsorption dryer must be rendered pressureless again and the leaks must be repaired.
- If no further flow noises can be heard and if the pressure gauge does not indicate any further increase in pressure, you can open the cut-off valve completely.
- Only then switch on the adsorption dryer controller.

8.3 *Mains operation*

Pressurisation has been successful. Check whether the compressed air system downstream of the adsorption dryer can be opened safely. Then proceed as follows:



- Slowly open the cut-off valves at the outlet of the adsorption dryer until you hear the flow noise.
- Keep an eye on the pressure gauge. Should the pressure suddenly drop, check whether any tapping points are still open.
- If the pressure remains stable and you no longer hear any flow noise, the cut-off valve downstream of the adsorption dryer can be opened completely.
- Start the controller. Once switched on, it can take 1 minute until the first valve is opened.
- Keep an eye on the pressure gauges. The operating pressure must be virtually "0" on the expanding side. The expansion noise is loud, only quiet flow noises should be perceived after this.
- Once regeneration has been completed, pressurisation starts. During this time, the previously opened valve must be closed and pressurisation must start again.
- Once the pressurisation time has passed, the pressure on both vessels must be virtually the same.
- Now also take into account the expansion (regeneration) on the other side. If this also works as described above, the adsorption dryer is ready for operation.

8.4 Disconnecting from the mains




Should you have to disconnect the adsorption dryer from the mains, e.g., for a maintenance operation, make sure that this work is only carried out when the device is free from pressure.



Wear your personal protective equipment. Proceed as follows:



- Close the cut-off valves at the inlet and outlet of the adsorption dryer.
- Open the manual drain on the after-filter housing.

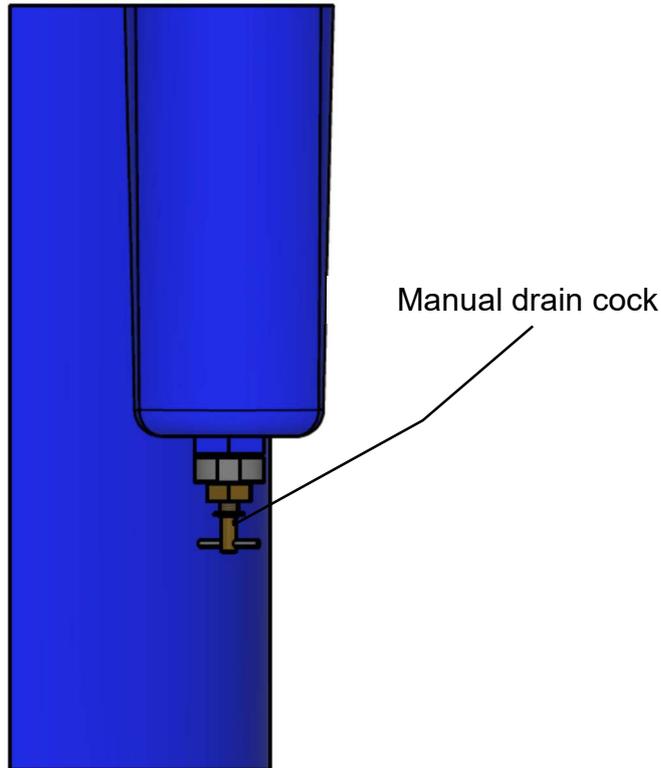

- Keep an eye on the pressure gauge and wait until it displays "0" psi before starting work.
- Then close the manual cock again.

Instead of using the manual drain cock, you can also depressurise the adsorber vessels by allowing the controller to continue to run upstream and downstream of the dryer if the shut-off devices are closed, until both sides are depressurised.

The adsorption dryer is now disconnected from the mains.

9 Maintenance



Maintenance work may only be carried out by suitably qualified personnel! Make sure that the device is free from pressure before starting work and observe the applicable accident prevention regulations for the place of installation!

9.1 Regular maintenance work

The following table gives an overview of the intervals and scope of the maintenance work:

Maintenance of	Activity	Every day	Every month	Every 12 months	Every 24 months	Every 48 months
Pressure gauge and controller	Visual check, functional check	X				
Control box	Check that the cables and terminals are securely fixed			X		
Silencer	Clean			X		
	Replace				X	
Prefilter and after-filter element	Replace the filter element			X		
Desiccant	Replace					X
Sieves / diffuser	Clean, replace if necessary				X	
O-rings of filter housing	Replace				X	
Piston changeover valves	Replace				X	
Solenoid valves	Replace				X	
Pressure dewpoint sensor (if installed)	Replace				X	

9.2 Daily checks

The following points should be checked every day:

- The difference in the operating pressure upstream and downstream of the adsorption dryer is not more than 7,25 psi.
- Open the manual drain cock slightly on the after-filter. It must not drip.
- Check if you can hear any unusual or loud noises.
- Check for leaks.
- If prefilters are installed, check that the condensate drains work properly.

9.3 *Checking the pressure dewpoint*

If a pressure dewpoint controller is installed, the pressure dewpoint is displayed. You can then set the pressure dewpoint according to your requirements.

With the standard package, the ECOMATIC (time control only) is already installed. Since this controller can't measure the pressure dewpoint, you should measure it externally from time to time.

Determine a measuring point behind the dryer and connect an external measuring device. Make sure that this measurement is used in accordance with the manufacturer specifications and that it is suitable for the pressure dewpoint range of the adsorption dryer which is to be measured. Record these values in order to be able to track the course of the pressure dewpoint.

9.4 *Overview of maintenance parts*

9.4.1 *Annual maintenance*

Type	Component	Designation	Interval	Measure
DDN 200	APE-DDN 200	Filter elements	Every 12 months	Replace
DDN 285	APE-DDN 285	Filter elements	Every 12 months	Replace
DDN 350	APE-DDN 350	Filter elements	Every 12 months	Replace
DDN 480	APE-DDN 480	Filter elements	Every 12 months	Replace
DDN 590	APE-DDN 590	Filter elements	Every 12 months	Replace
DDN 705	APE-DDN 705	Filter elements	Every 12 months	Replace

9.4.2 *Two- and four-year maintenance*

Type	Component	Designation	Interval	Measure
DDN 200	FT-DDN 200	Functional components set	Every 24 months	Replace
	F-DDN 200	Desiccant filling	Every 48 months/ when required	Replace
DDN 285	FT-DDN 285	Functional components set	Every 24 months	Replace
	F-DDN 285	Desiccant filling	Every 48 months/ when required	Replace
DDN 350	FT-DDN 350	Functional components set	Every 24 months	Replace
	F-DDN 350	Desiccant filling	Every 48 months/ when required	Replace
DDN 480	FT-DDN 480	Functional components set	Every 24 months	Replace
	F-DDN 480	Desiccant filling	Every 48 months/ when required	Replace
DDN 590	FT-DDN 590	Functional components set	Every 24 months	Replace

	F-DDN 590	Desiccant filling	Every 48 months/ when required	Replace
DDN 705	FT-DDN 705	Functional components set	Every 24 months	Replace
	F-DDN 705	Desiccant filling	Every 48 months/ when required	Replace


9.5 Replacing the filter elements


The prefilter of the adsorption dryer retains particles and liquid forms of oil and water, thereby protecting the desiccant against contamination.

The job of the after-filter is to stop any abrasion dust that has built up from the desiccant. Proceed as follows to replace these filter elements:

- Close the cut-off valves upstream and downstream of the adsorption dryer.
- Open the manual drain cock on the filter and wait until the pressure gauge on the adsorption dryer shows "0" psi.
- Turn the bottom part of the filter in a clockwise direction to open it. Unscrew it completely and carefully put it down.
- Now you can remove the filter element out of the filter.
- Use a damp cloth to clean inside the filter housing.
- Check whether the O-ring in the filter head is OK. Replace if necessary.
- Please fit the new filter element into the three pockets, on the inside of the filter bowl.
- Screw the bottom part of the filter back in again and close the manual drain cock.
- Slowly open the shut-off device at the outlet and check for leaks.
- Once the pressure is back to normal again, slowly open the shut-off device at the outlet.

9.6 Replacing the desiccant

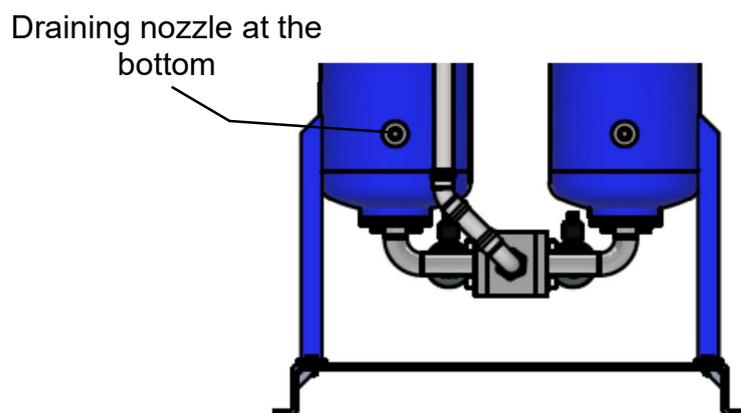

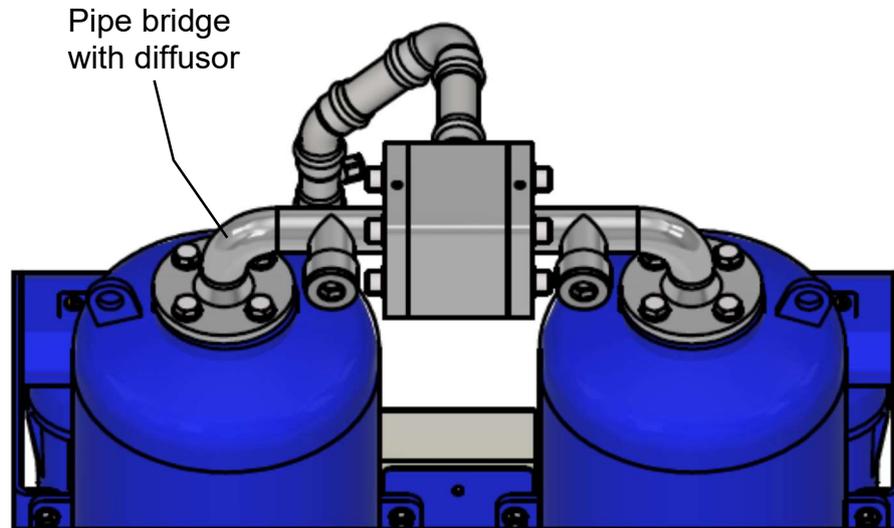

When replacing the desiccant, make sure to wear your personal protective equipment, namely the respiratory protection and goggles.

Risk of slipping if material is spilt!



The service life of the desiccant is hugely dependent on the quality of the compressed air at the inlet of the adsorption dryer. Strain from oil vapour significantly reduces the service of the desiccant. In favourable conditions, the service life can exceed well over 10,000 hours. Proceed as follows to replace the desiccant:



- Depressurise the adsorption dryer.
- First, open the sealing plug on the top.
- Place a collecting vessel underneath the bottom sealing plug and remove it.
- Collect the desiccant as it runs out.
- Empty the vessel completely i.e., by using a vacuum cleaner.
- Blow through the sieves inside the vessel.
- Close up the bottom sealing plug again and pour the new adsorption material through the top opening. Depending on its use, the desiccant can consist of several layers. Make sure that you add the materials in the correct order. WS and alumina materials generally form the water protective layer and must be added first.
- Once you've reached the filler plug, condense the material through slight vibration of the sheath of the adsorption dryer and then top up again until the desiccant no longer condenses, even with vibration.
- Screw the top sealing plug back in again.



We recommend that you only change the filter element after the desiccant has been changed. Likewise, only change, or at least clean the solenoid valves after the trial run. To do so, allow the adsorption dryer to run for half an hour. The dust particles that accumulate are hereby captured in the after-filter element which is to be replaced. Only then replace the filter element.

As a rule, the adsorption dryer needs several cycles before it reaches the desired pressure dewpoint. Take into account that the piping system behind the adsorption

dryer may become contaminated with moisture during this phase. You may need to provide a blow-off line during the installation operation.

Contaminated desiccant must be disposed of in accordance with the local regulations! As a rule, the disposal code is:



"Used, non-contaminated desiccant" with the disposal code number:
06 08 99

If other toxic or hazardous substances have been stored, then this must be determined by the operator and the desiccant must be disposed of taking the type of contamination into consideration!

9.7 Replacing the pistons and cylinder liners

The change-over valves consist of a guide sleeve and a piston. These pistons are subject to a mechanical load and must be replaced after two years. Proceed as follows to replace them:

- Depressurise the adsorption dryer.
- Make sure that the pressure gauges show "0" and that the adsorption dryer is fully depressurised.
- Switch off the controller.
- Remove the screw connections. Be mindful of the seals which are inside the screw connections. The pipeline connection and both vessel connections must be disconnected here.
- You can now remove the change-over valve by unscrewing it, as shown in the diagram below.
- Replace the piston and seal.
- Build the changeover valve back together again in the reverse order. Torque moment for screws 6 Nm.
- Make sure that the seal is positioned correctly and then tighten all removable screw connections again.
- Repeat the same operations on the bottom side.

Torque moment for screws:

DDN 200 - 705


Connection middle part to side part Nm80 (M16)

Connection side part to vessel flange Nm100 (M16)


9.8 Replacing the solenoid valves

The solenoid valves are supplied fully assembled and should also be installed as such. These valves are also subject to a mechanical load and must be replaced after two years. Proceed as follows to replace them:

- Depressurise the adsorption dryer.
- Make sure that the pressure gauges show "0" and that the adsorption dryer is fully depressurised.
- Switch off the controller by disconnecting the mains power plug.
- Loosen the solenoid valve plug.
- Loosen the removable screw connections.
- Remove the exhaust bridge.
- Dismantle and replace the solenoid valves.
- Mount the exhaust bridges again and make sure that the seal fits correctly. Tighten all screw connections again.

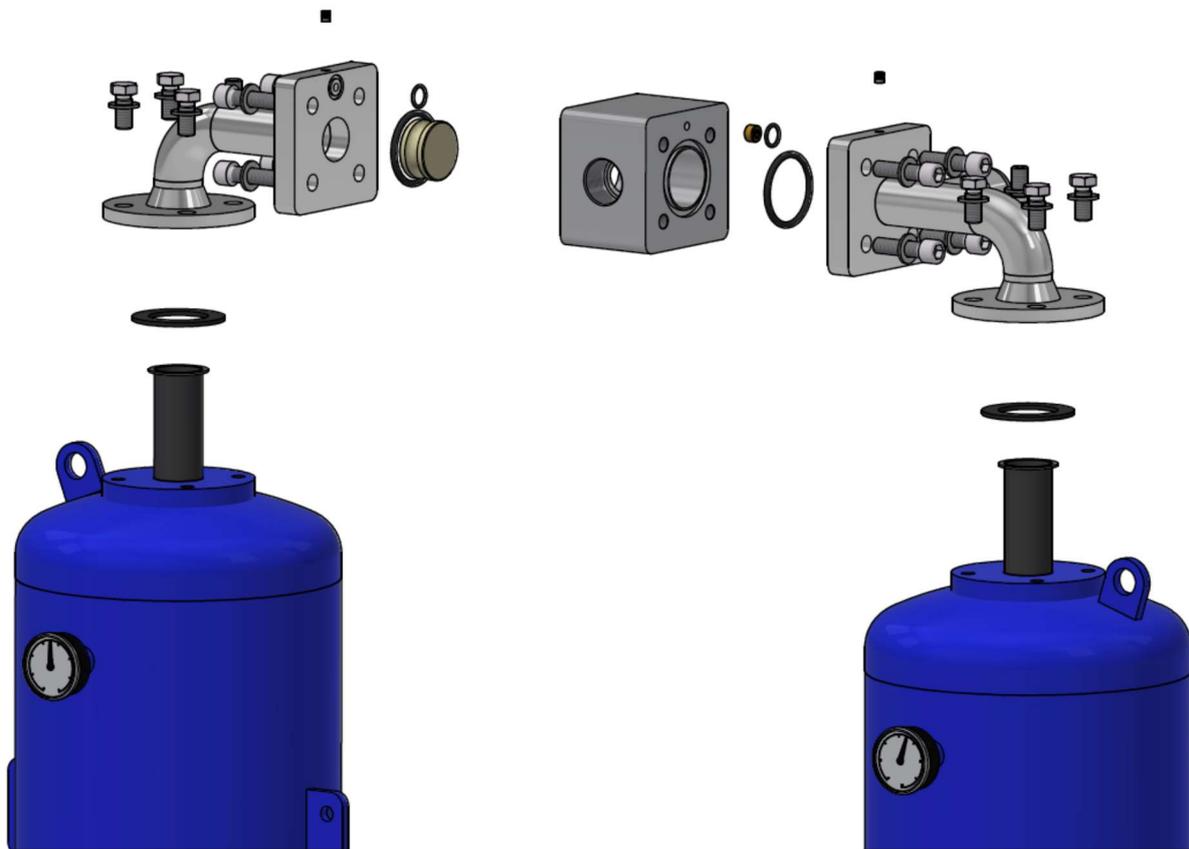


- 1 Removable screw connection
- 2 Solenoid valve
- 3 Silencer

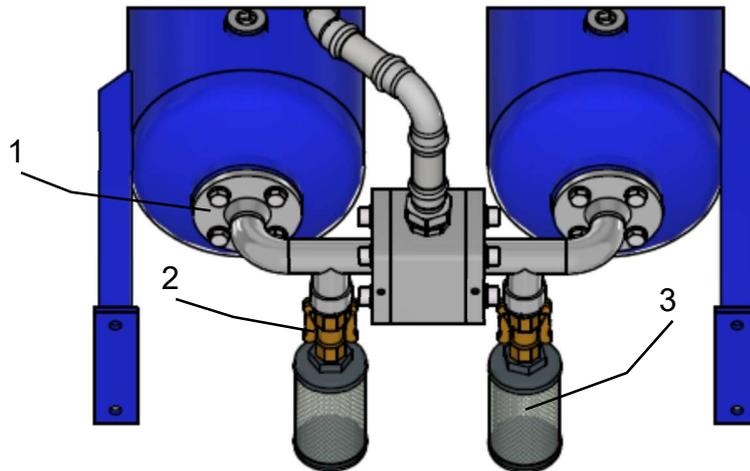

9.9 Replacing the silencers

The silencers lessen the noise generation of the regeneration process. In these silencers, proportionate desiccant abrasion in the form of dust is retained. Combined with the outgoing moist air, the silencers become clogged with dust over time and must be replaced. Proceed as follows to replace them:



- This work must only be carried out after the device has been depressurised.
- To do so, close the inlet and outlet shut-off devices.
- Switch off the controller by disconnecting the mains power plug.
- Unscrew the silencers in an anticlockwise direction from the thread.
- Wrap a few layers of Teflon around the thread of the new silencer to make it easier to dismantle it later. Then screw the new silencer back in again in a clockwise direction until hand tight.
- If the desiccant also has to be replaced, replace this first, then the silencers, then perform a trial run.

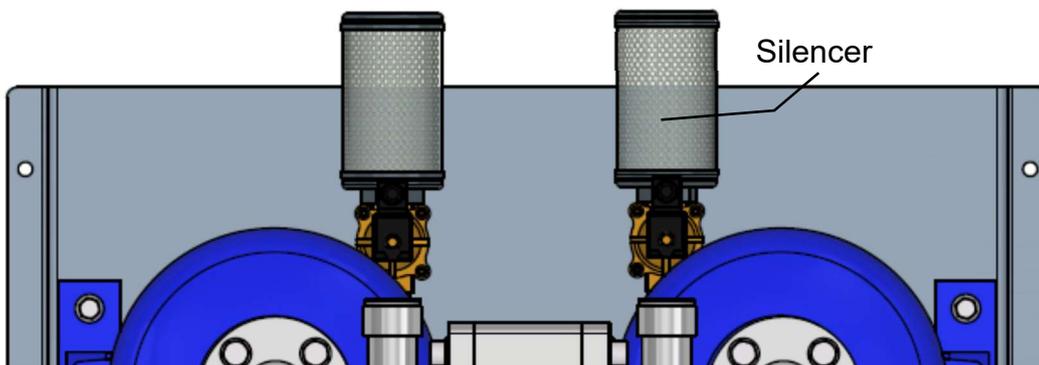

9.10 Replacing the pressure dewpoint sensor

If you've chosen the "ECOTROconomy" option, you must replace the sensor element every two years. Desiccant abrasion and oil vapours can cause the accuracy of the sensors to drift. This sensor element must therefore be replaced as follows:

- This work must only be carried out after the device has been depressurised.
- To do so, close the inlet and outlet shut-off devices.
- Switch off the controller by disconnecting the mains power plug.
- Loosen the cubic plug of the sensor element.
- Unscrew the sensor element in an anticlockwise direction.
- Fit the new sensor element by screwing it in a clockwise direction.
- Screw the cubic plug back onto the sensor.
- Slowly open the inlet shut-off device until both vessels are pressurised again.
- Check for leaks on the screw connection. If there is a leak, seal it.
- Then start up the controller and open the shut-off device on the outlet.

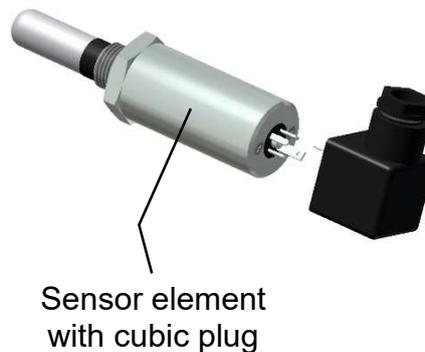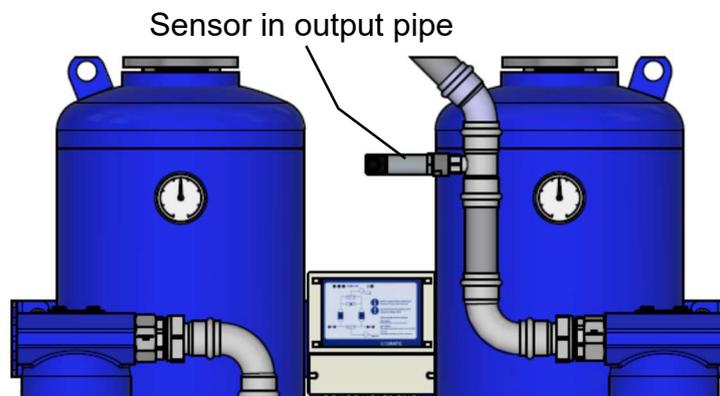

10 Faults

The following faults may occur:

Error	Possible cause	Corrective action
Device does not switch on	No power supply	Check supply voltage
	Microfuse defective	Replace fuse
Dryer does not regenerate	Controller does not work	Call Maintenance
	No power supply	Check supply voltage
	Compressor synchronization circuit is active	Set DIL switch No. 8 to "1" (for ECOMATIC)
	Solenoid valve does not open	Check cable connection / terminals
Dryer does not reach the pressure dewpoint	Desiccant not sufficiently regenerated yet	Allow it to keep running (after 48 hours at the latest, the pressure dewpoint should be reached)
	Water breakdown / oil breakthrough	Call Maintenance, replace desiccant if necessary
	Defective condensate drain	Check prefilter for buildup of condensate
	Inlet conditions incorrect (pressure, temperature)	Call Maintenance
	Compressed air extremely undersaturated	Apply moisture
	Check input parameters, possible by-pass buildup in the desiccant due to flow rate being too low	Call Maintenance
	Silencer blocked	Replace
No pressure according to pressure gauge on dryer	Inlet to dryer closed	Open the supply line
Differential pressure indicator is in red zone	Filter element is clogged	Call Maintenance
Dryer keeps returning to alarm status	Reverse flow through by-pass, reverse flow via oil vapour adsorber	Change by-pass, install non-return valve, call Maintenance
Compressors start up too frequently	Leaks	Call Maintenance
No pressurisation	Piston in undefined position	Switch off controller, allow pressurisation to take place, then switch controller back on again

11 EU Declaration of conformity

EU - Declaration of conformity

Manufacture: KSI Filtertechnik GmbH
Siemensring 54-56
D-47877 Willich

Hereby we as responsible manufacture declare that the products supplied by us meet the requirements of the relevant directives and standards. Especially:

2006/42/EC Machinery Directive
2014/35/EU Low voltage Directive
2014/68/EU Pressure Equipment Directive

Fluid group 2 according to the Pressure Equipment Directive, Article 13 for devices and protective systems for the intended use in the processing of compressed air and gases (compressed air & nitrogen).

Generally in accordance with ASME VIII Div.1 Rules for construction of pressure vessels

Compliance with the following harmonized standards is given:

DIN EN ISO 12100-1-2
DIN EN ISO 14121-1
DIN EN 55011
DIN EN 61000-6-2, 61000-3-2, 61000-3-3

This declaration applies to the products:

Adsorption Dryer DDN 200 to DDN 350				
Pressure Vessel				
Dryer	Qty. Pressure Vessel	Max. admissible pressure psi (g)	Volume in L	CRN
DDN 200	2	232	69	E5582.612357890YTN
DDN 285	2	232	76	
DDN 350	2	232	112	

Adsorption Dryer DDN 200 to DDN 350					
Filter					
Dryer	Filter Type	Quantity	Max. admissible pressure psi (g)	Volume	Category to PED
DDN 200	APF410(Type)	2	232	See operating manual filter	
DDN 285	APF410(Type)	2	232		
DDN 350	APF410(Type)	2	232		

Adsorption Dryer DDN 480 to DDN 705				
Pressure Vessel				
Dryer	Qty. Pressure Vessel	Max. admissable pressure psi (g)	Volume in L	CRN
DDN 480	2	232	168	E5583.612357890YTN
DDN 590	2	232	213	
DDN 705	2	232	228	

Adsorption Dryer DDN 480 to DDN 705					
Filter					
Dryer	Filter Type	Quantity	Max. admissable pressure psi (g)	Volume	Category to PED
DDN 480	APF765(Type)	2	232	See operating manual filter	
DDN 590	APF765(Type)	2	232		
DDN 705	APF765(Type)	2	232		

The pressure vessels belonging to this pressure equipment were manufactured in accordance with the ASME VIII Div.1 Rules. The manufacturer has created separate declarations of conformity for the pressure vessels.

All other components of these products correspond to the specifications of the AD2000 data sheets and are intended by the respective manufacturers for the corresponding purpose. The design at this point corresponds to good engineering practice.

In the event of any changes to the product not agreed with the manufacturer, this declaration loses its validity.

Signed:



Holger Krebs,
General manager
02.01.2023